INSTALLATION MANUAL

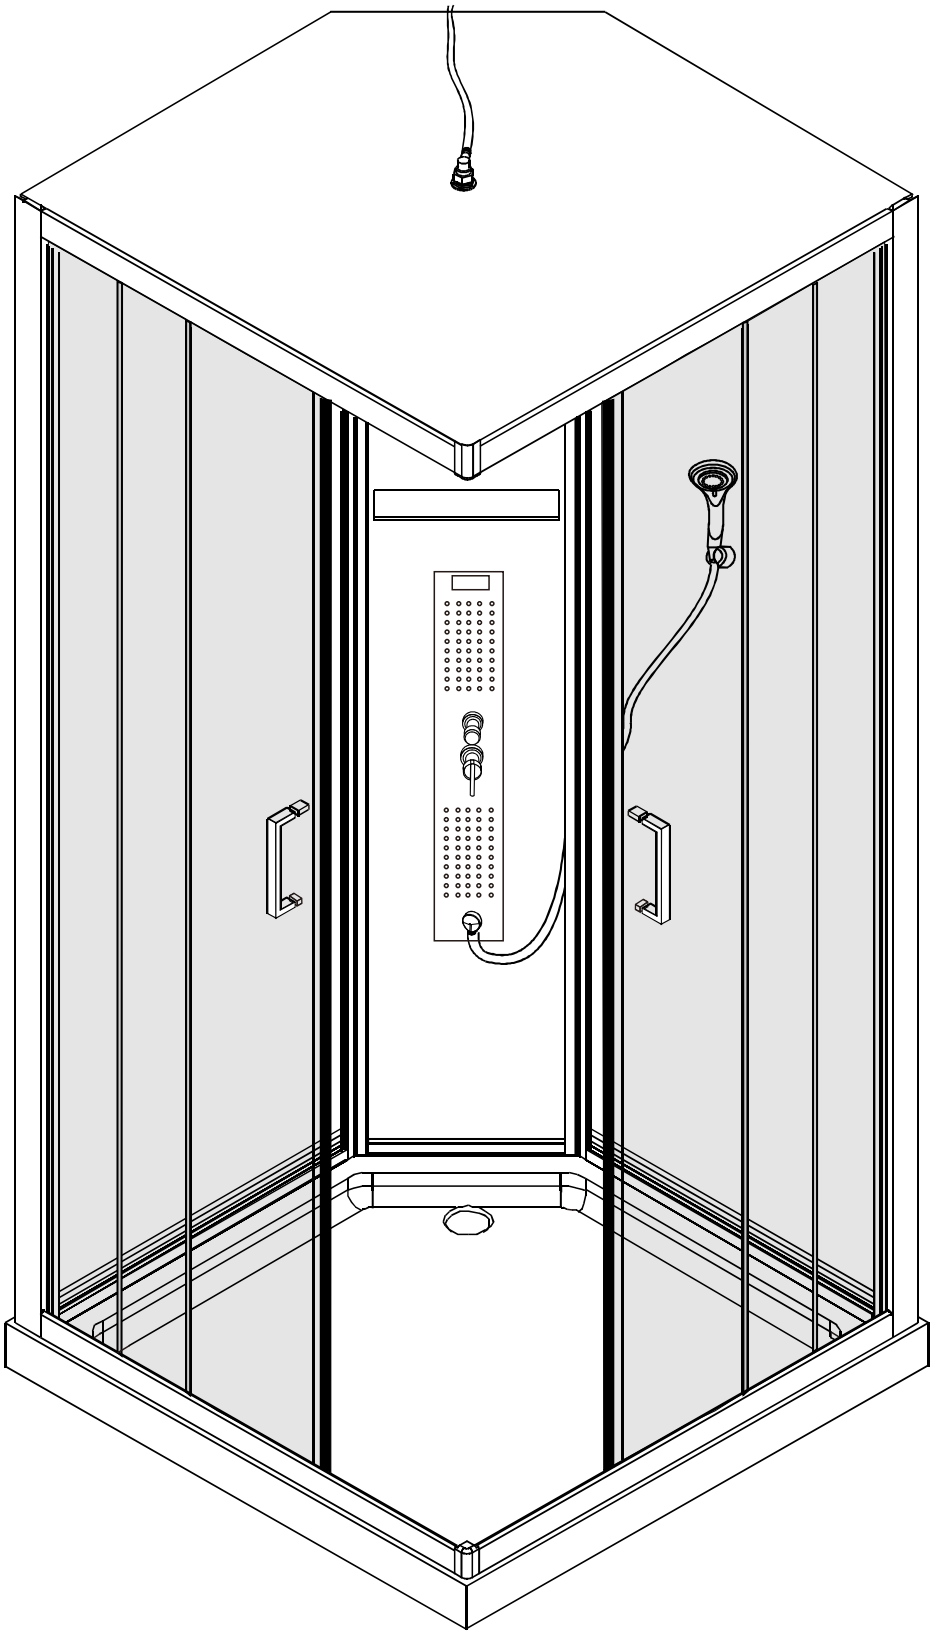

MA01 square

INSTALL TOOL

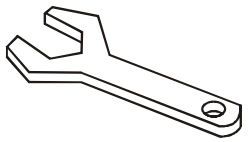
Omnipotent Spanner

Slottedheadscrewdriver

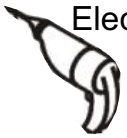
Electric drill (⌀3)

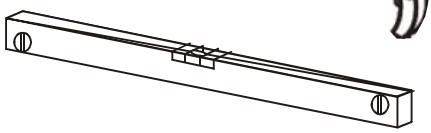
Gradient ruler

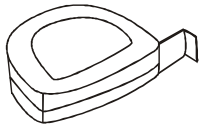
Tape measure

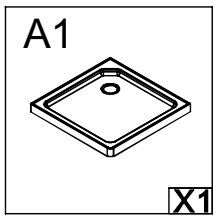
A1 X1

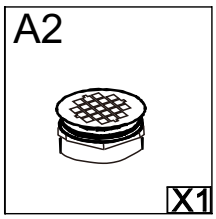
A2 X1

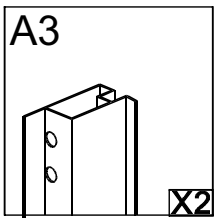
A3 X2

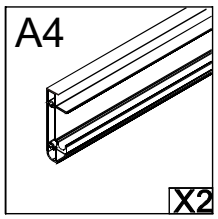
A4 X2

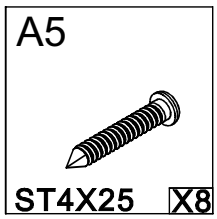
A5 ST4X25 X8

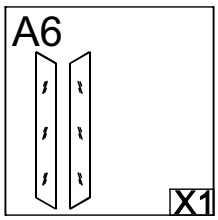
A6 X1

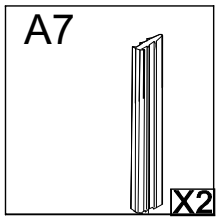
A7 X2

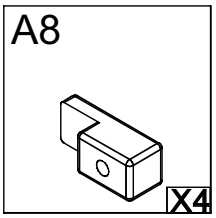
A8 X4

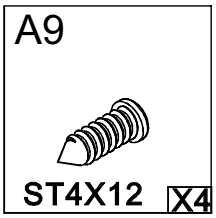
A9 ST4X12 X4

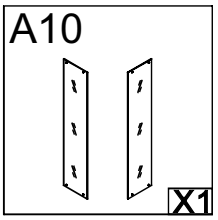
A10 X1

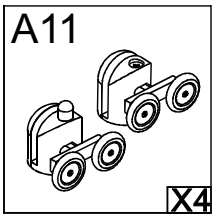
A11 X4

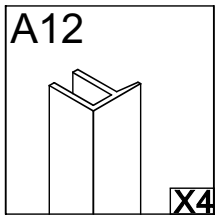
A12 X4

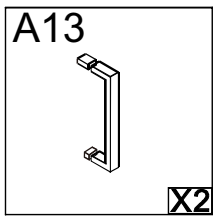
A13 X2

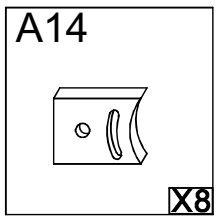
A14 X8

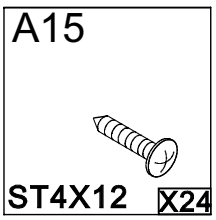
A15 ST4X12 X24

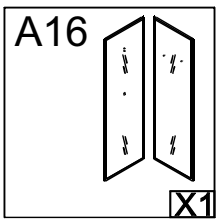
A16 X1

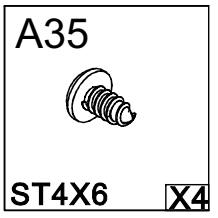
A35 ST4X6 X4

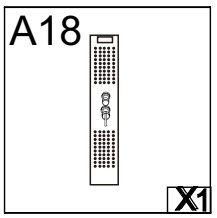
A18 X1

A19 X1

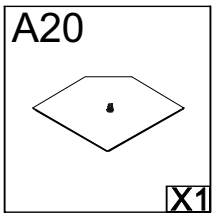
A20 X1

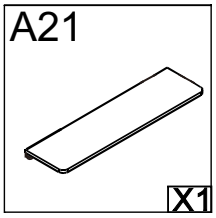
A21 X1

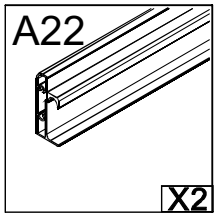
A22 X2

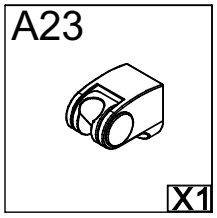
A23 X1

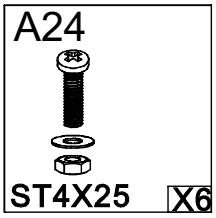
A24 ST4X25 X6

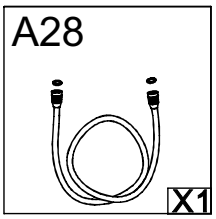
A28 X1

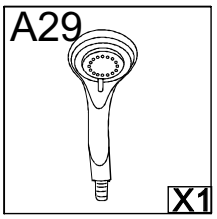
A29 X1

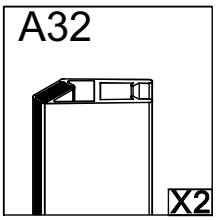
A32 X2

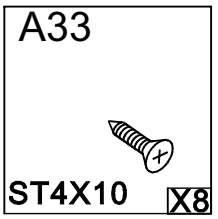
A33 ST4X10 X8

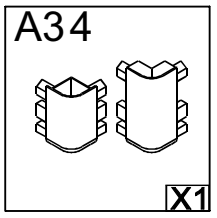
A34 X1

WaterArrangementMap

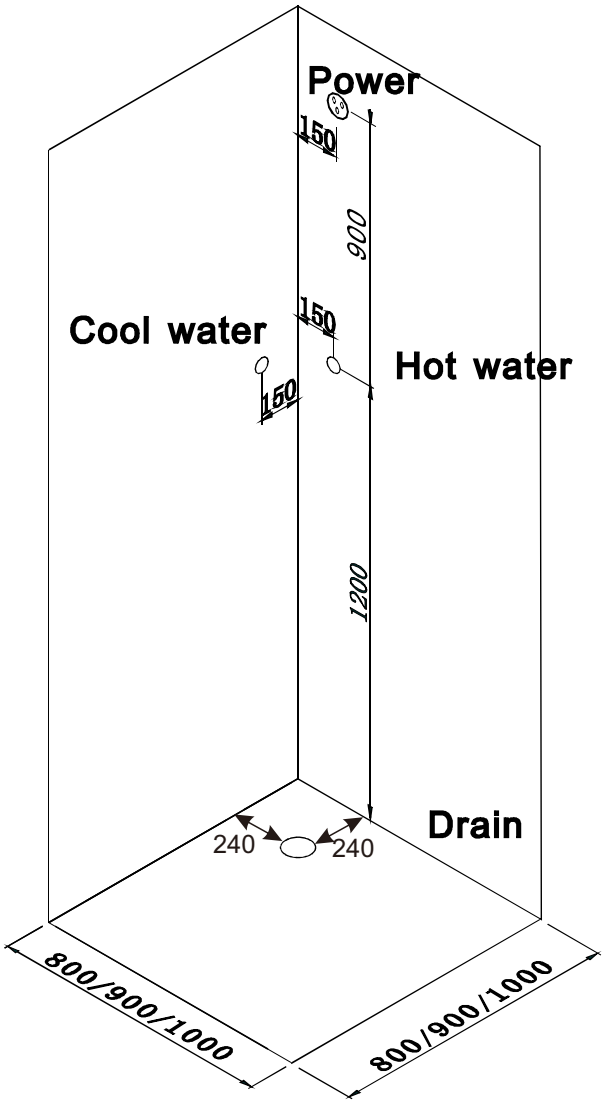

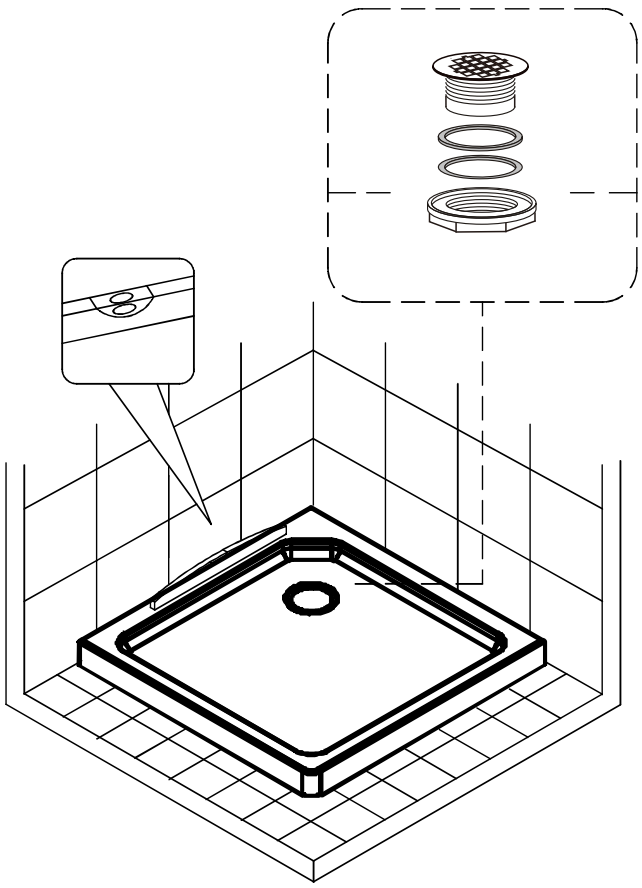

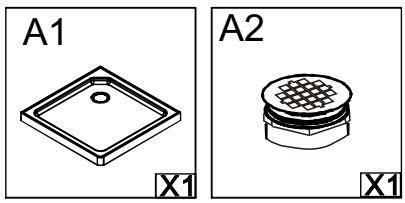

Note:
After the bottom basin is leveled up and downThe track follows the bottom basin and the top cover,There is deformation in radian size, corresponding toBend the lower rail to the top coverConsistent with the bottom basin radian

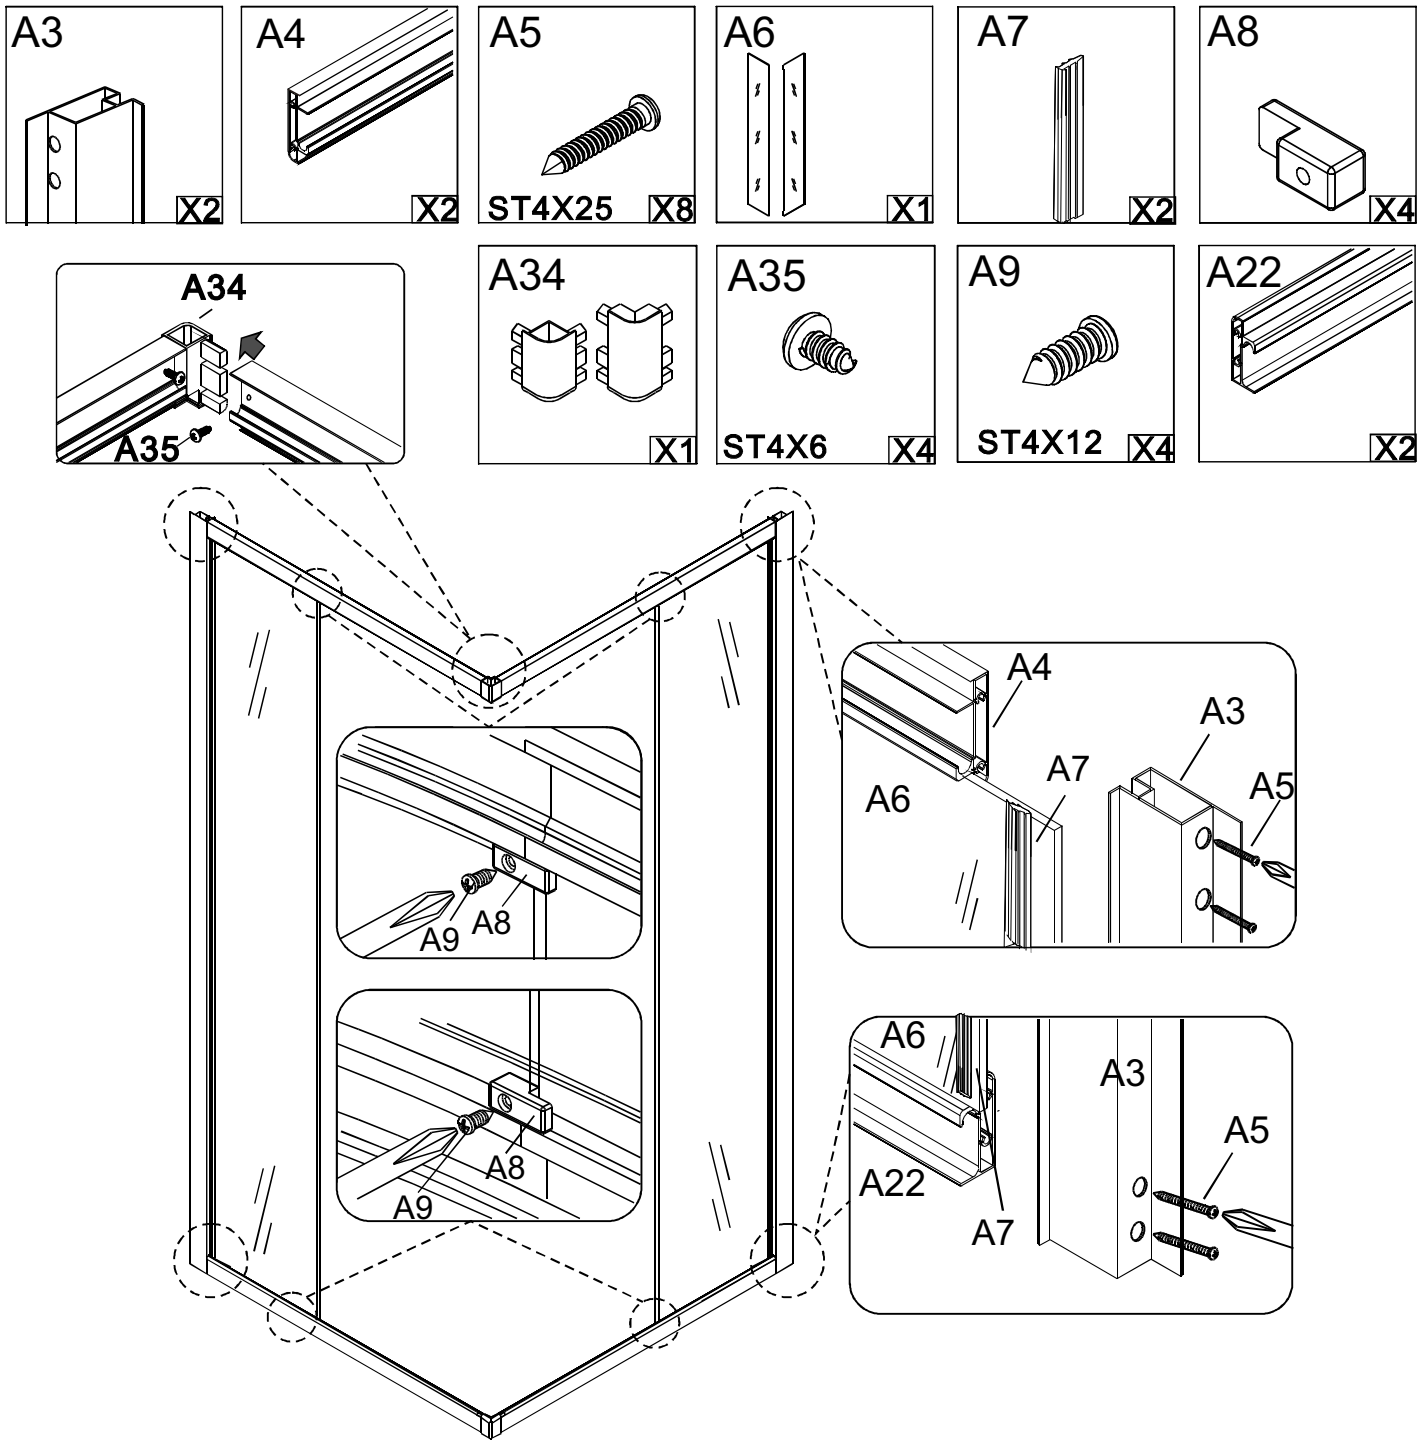
A3
X2
A4
X2
A5
ST4X25
X8
A6
X1
A7
X2
A8
X4
A34
A35
A34
X1
A35
ST4X6
X4
A9
ST4X12
X4
A22
X2
A9
A8
A4
A3
A7
A5
A6
A8
A9
A6
A3
A5
A22
A7

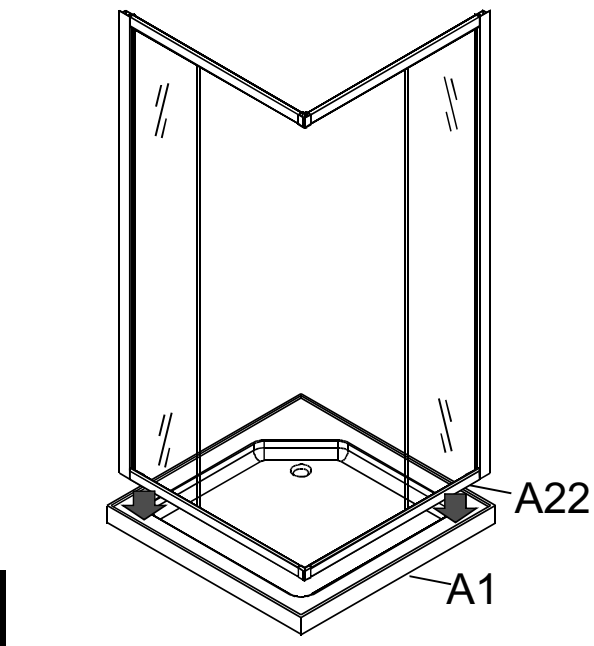
A22
A1

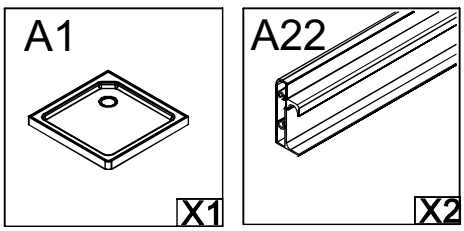
A1
X1
A22
X2

03

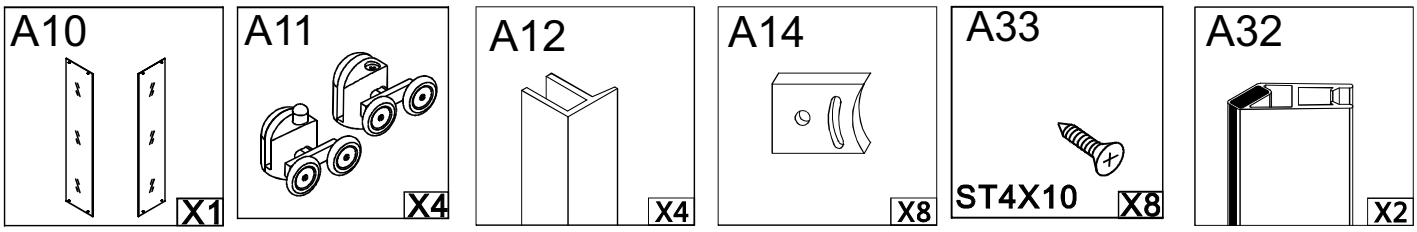
A10
X1
A11
X4
A12
X4
A14
X8
A33
ST4X10
X8
A32
X2

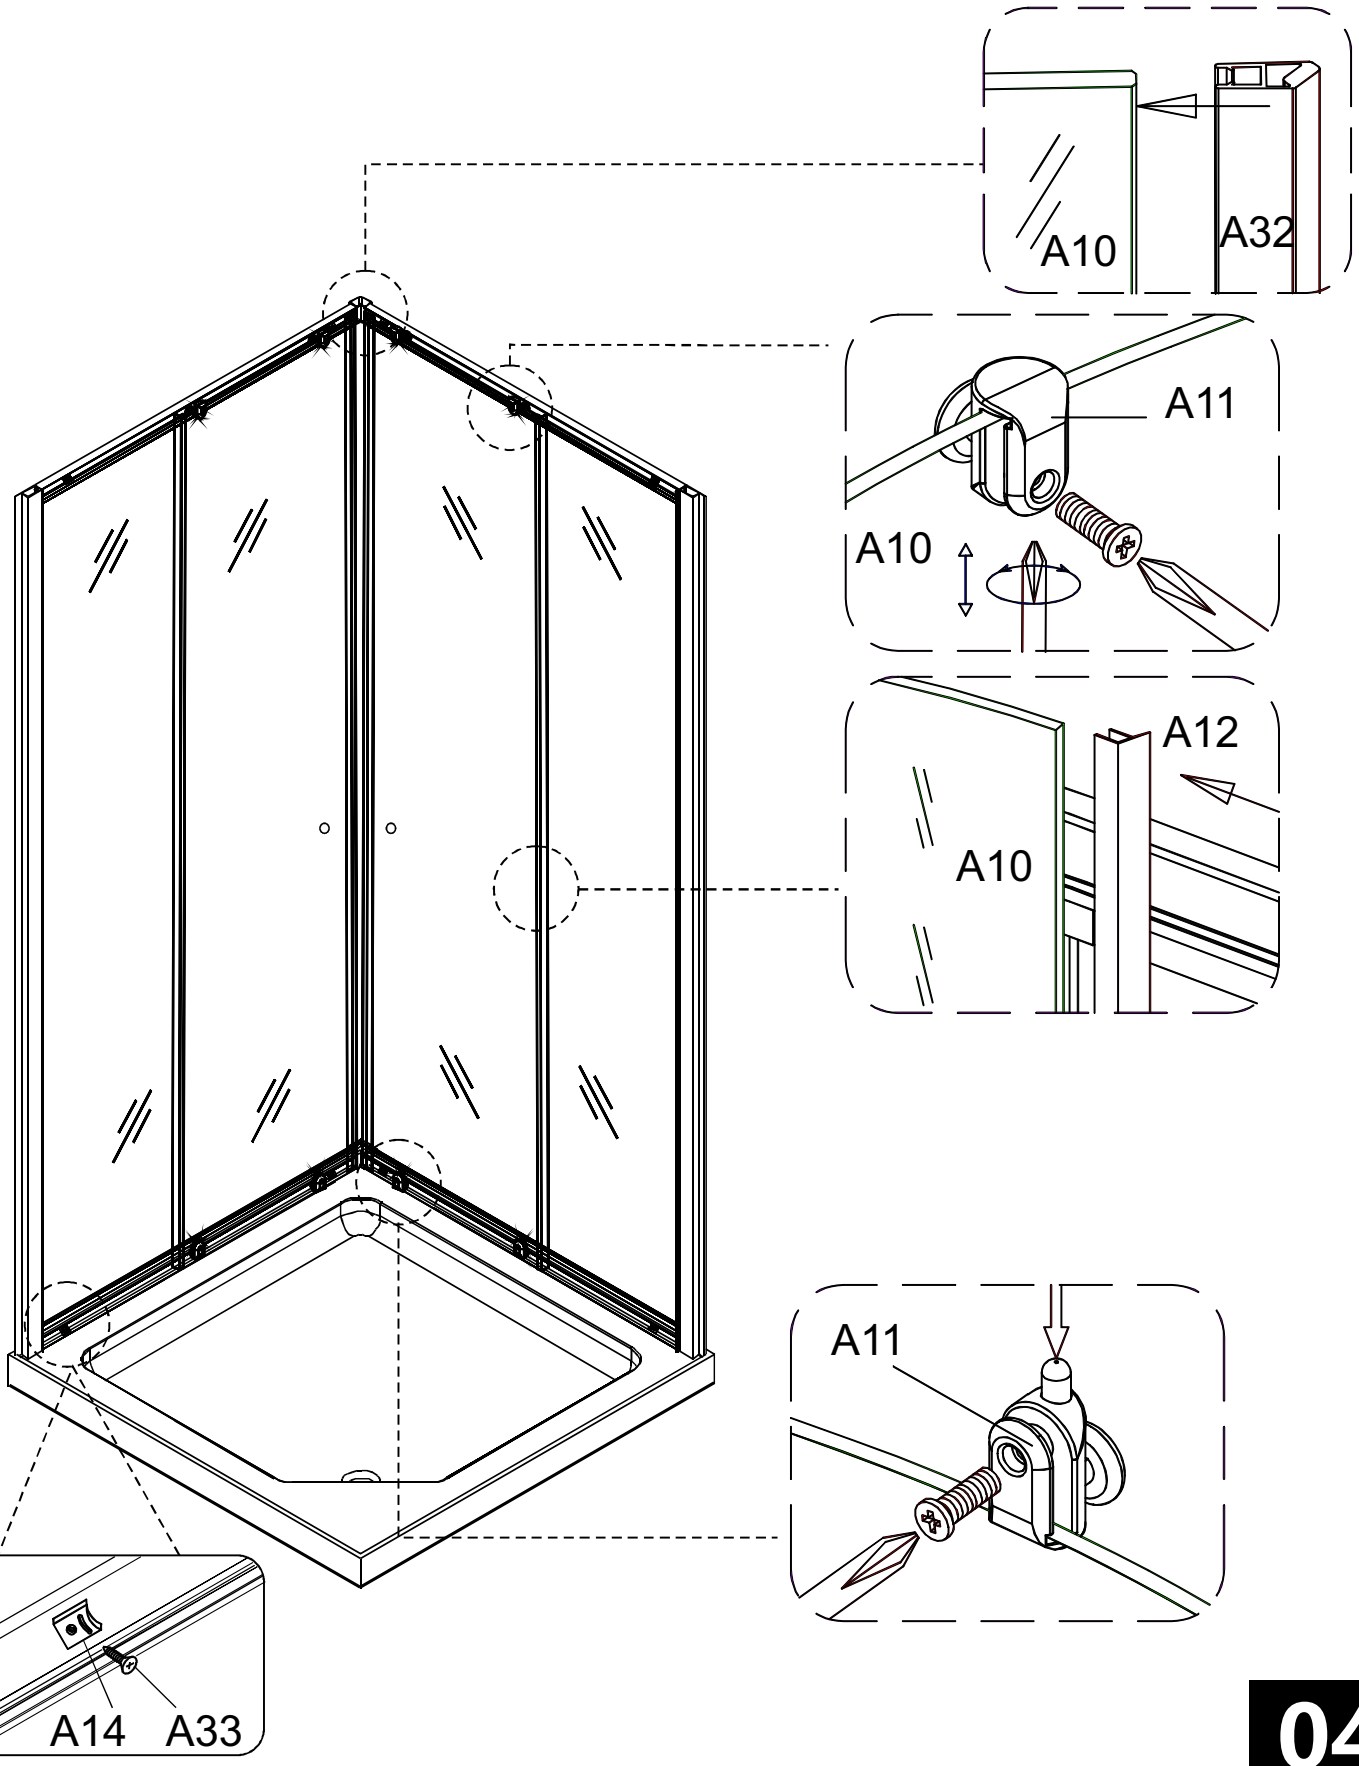
A10
A32
A11
A10
A12
A10
A11
A14
A33

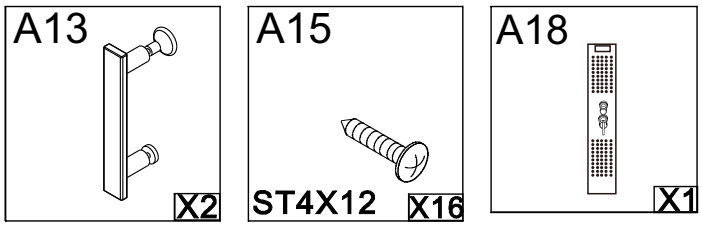
A13
X2
A15
ST4X12
X16
A18
X1

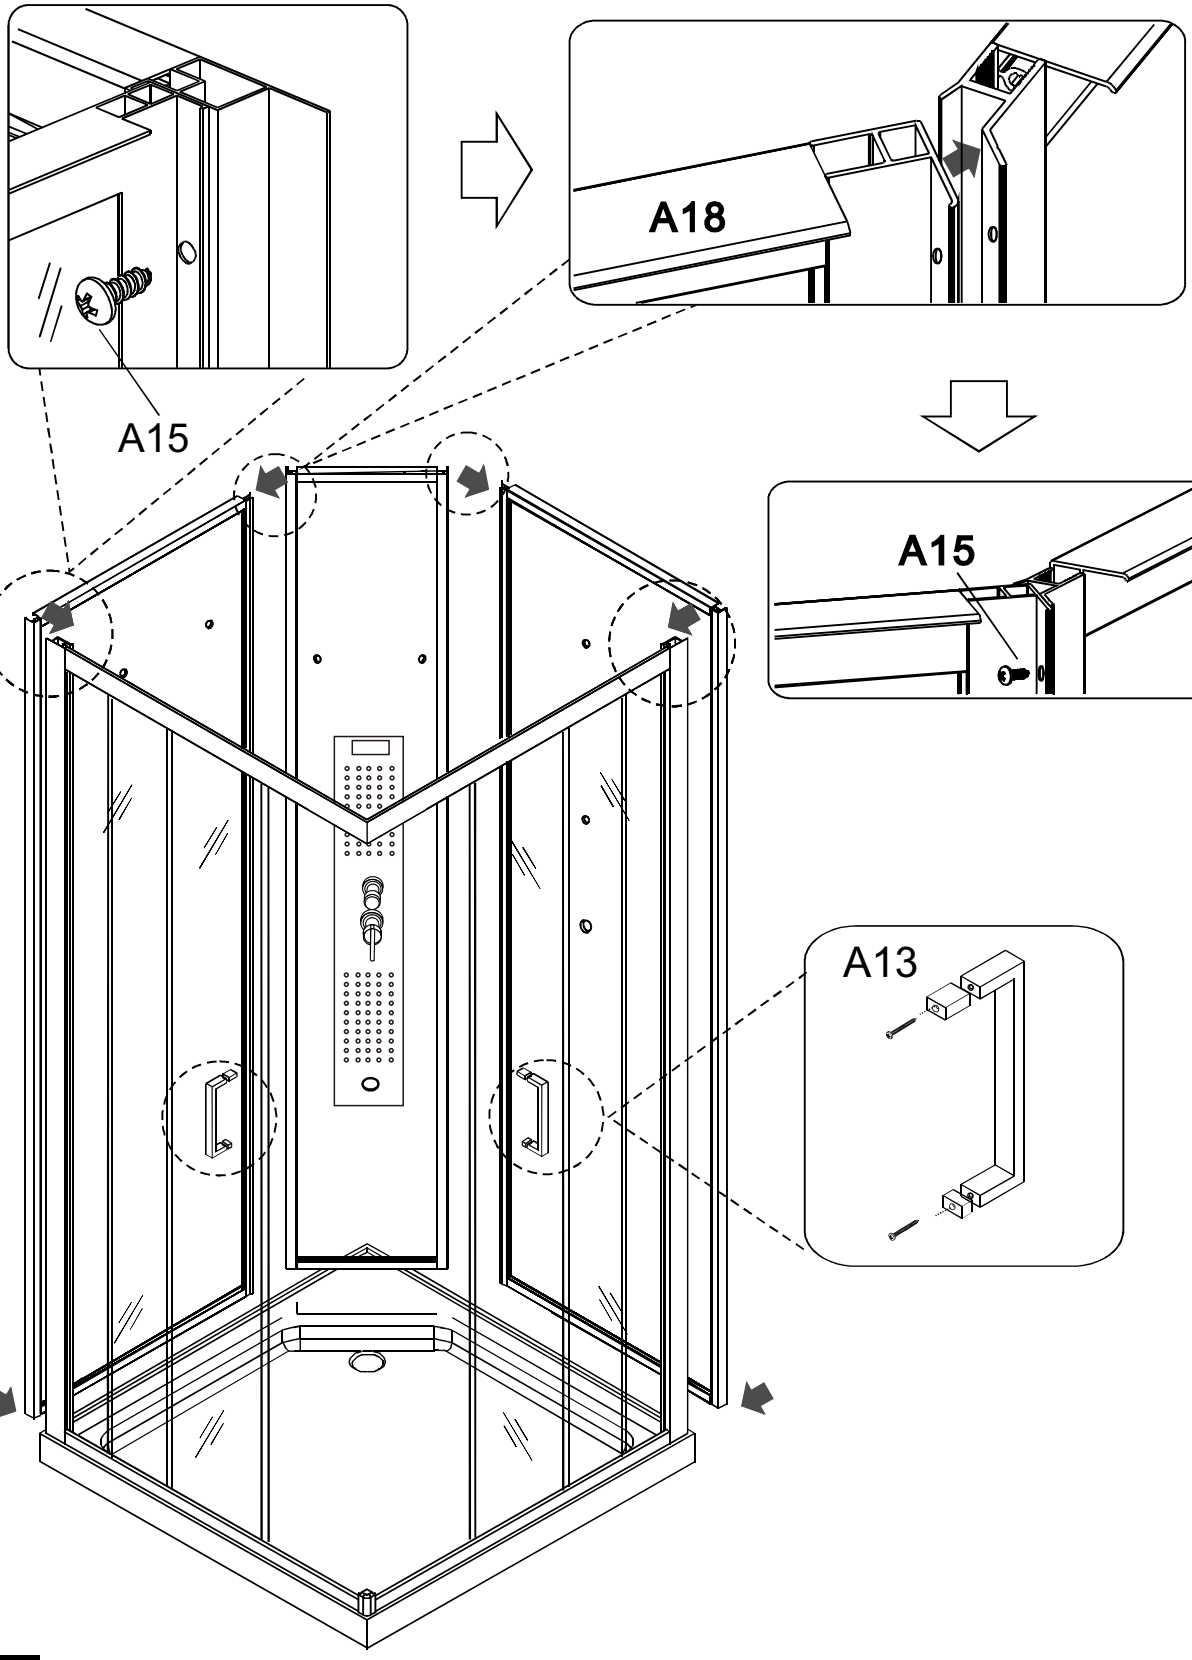
A18
A15
A15
A13

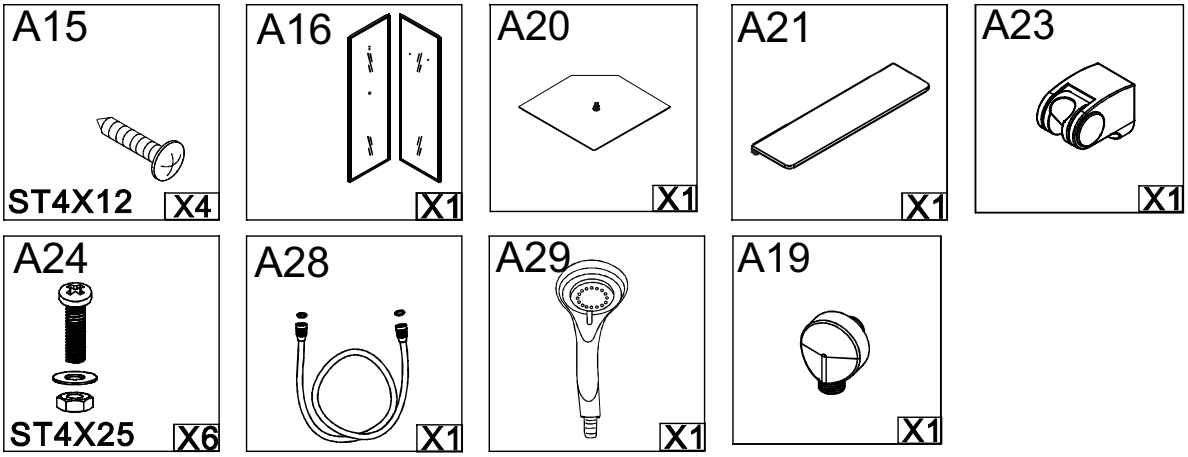
A15
ST4X12
X4
A16
X1
A20
X1
A21
X1
A23
X1
A24
ST4X25
X6
A28
X1
A29
X1
A19
X1

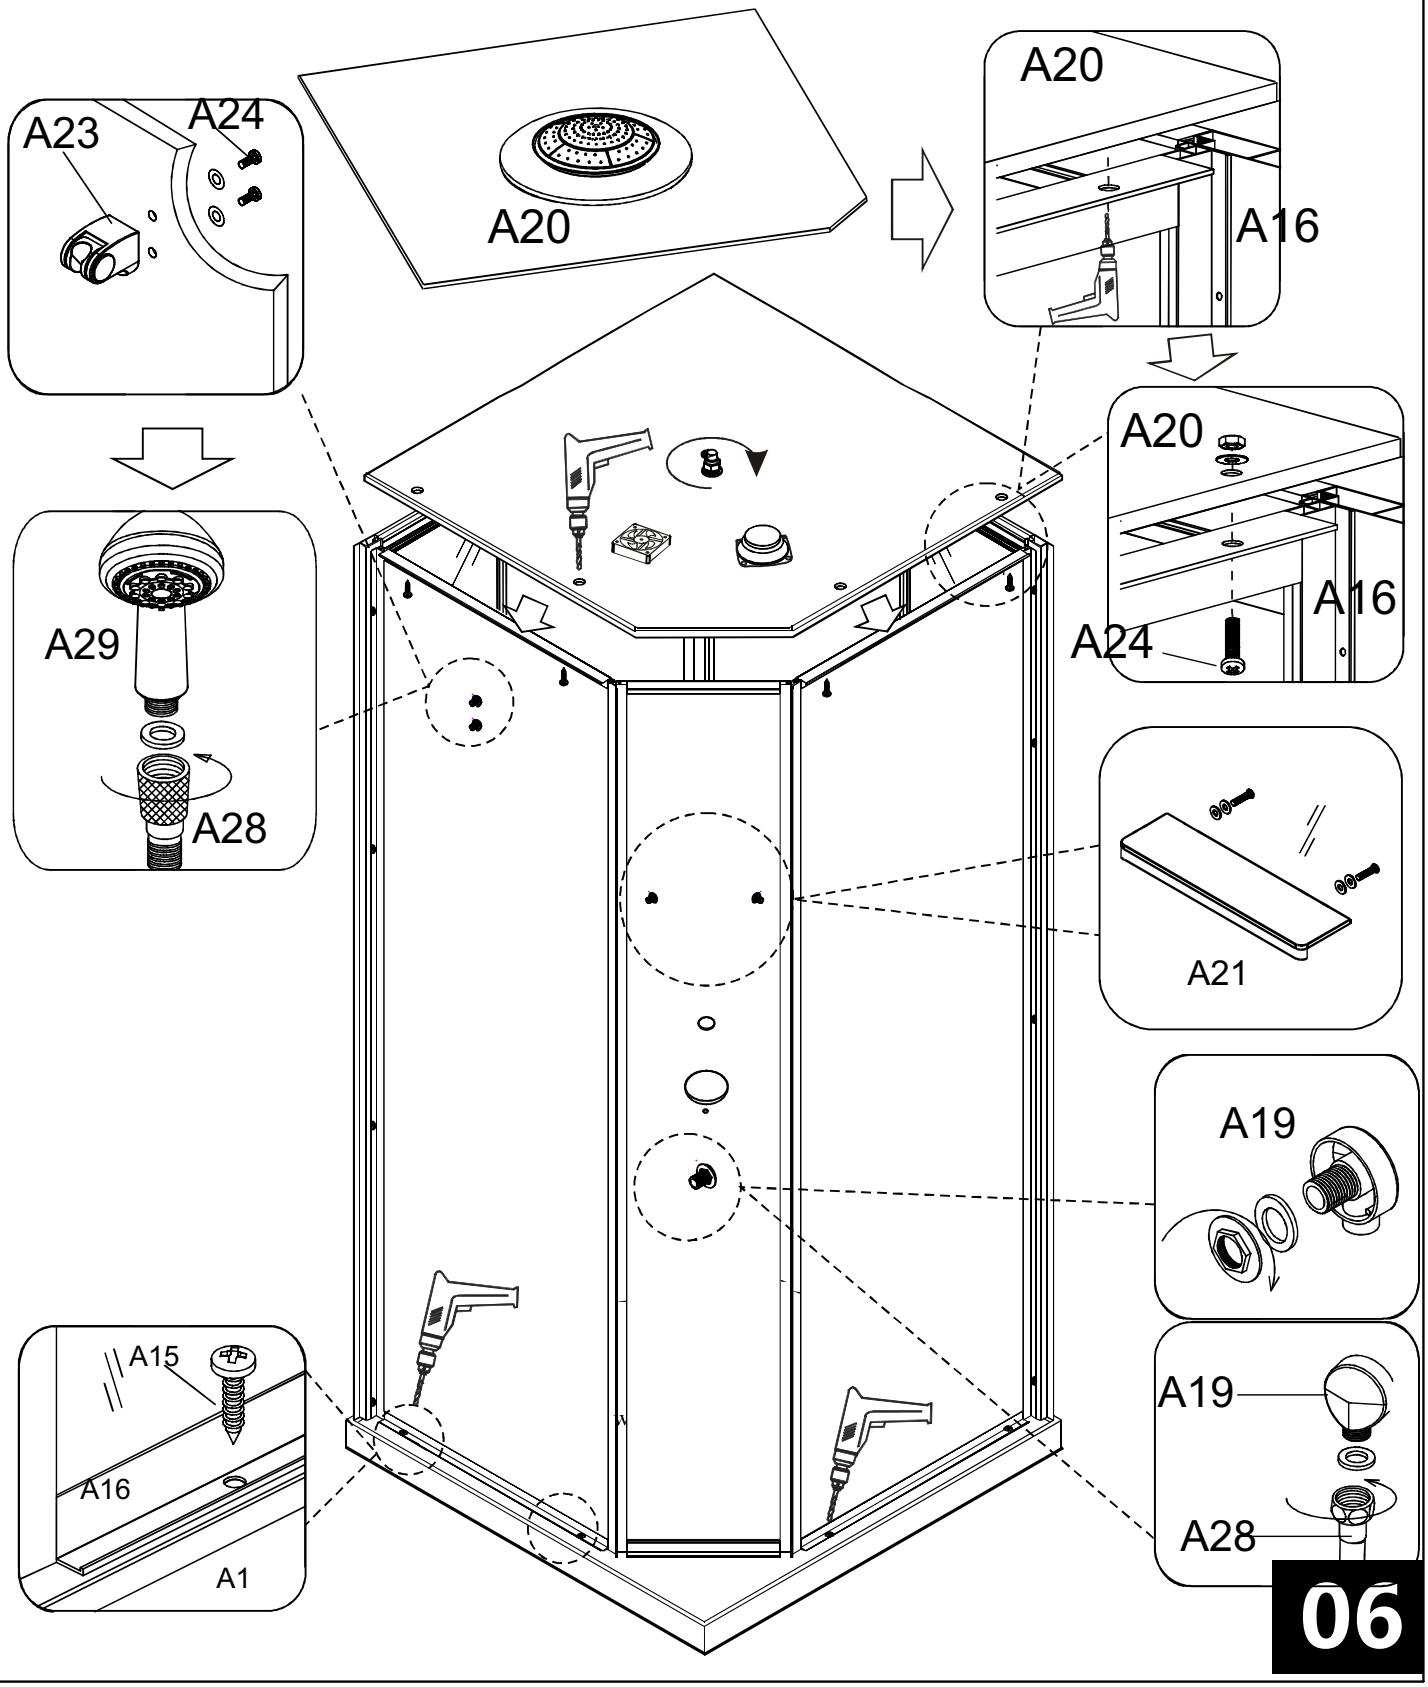
A23
A24
A20
A20
A16
A29
A28
A20
A16
A24
A21
A19
A19
A28
A15
A16
A1
06